 


A3161 Soundcore Flare Firmware Update Instructions

Step 1: Download the update tool and product firmware.

A) Download the update tool from the Soundcore website, unzip it, then double-click “setup.exe” and follow the default installation instructions.

 


B) Download the firmware (for Soundcore Flare), unzip it, and save it to the desktop.

Step 2: Double-click the “Anker” icon on the desktop.



Windows icon

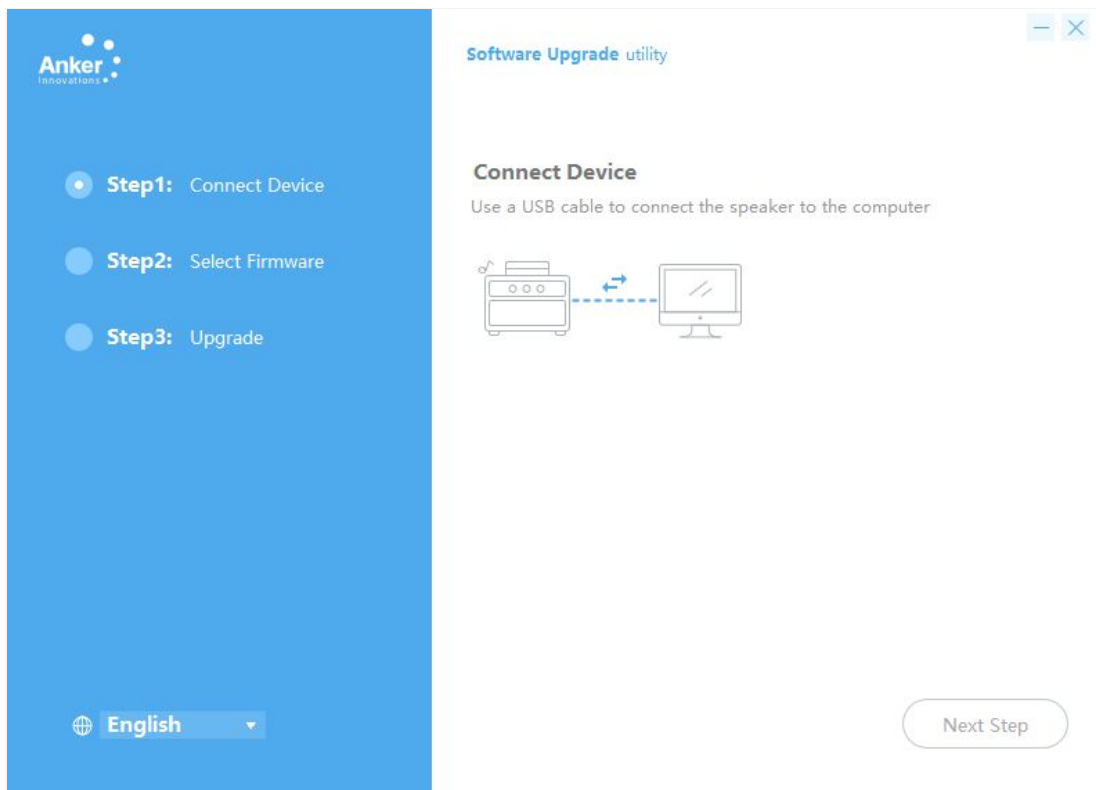

Step 3:

 
A) Plug the USB charging cable into your computer.

B) Turn off Soundcore Flare.


C) Press and hold the down the Bluetooth button.

D) Then connect the USB charging cable to your Soundcore Flare.

E) When the update tool interface says “Connected”, release the Bluetooth button, and click “Next Step.”

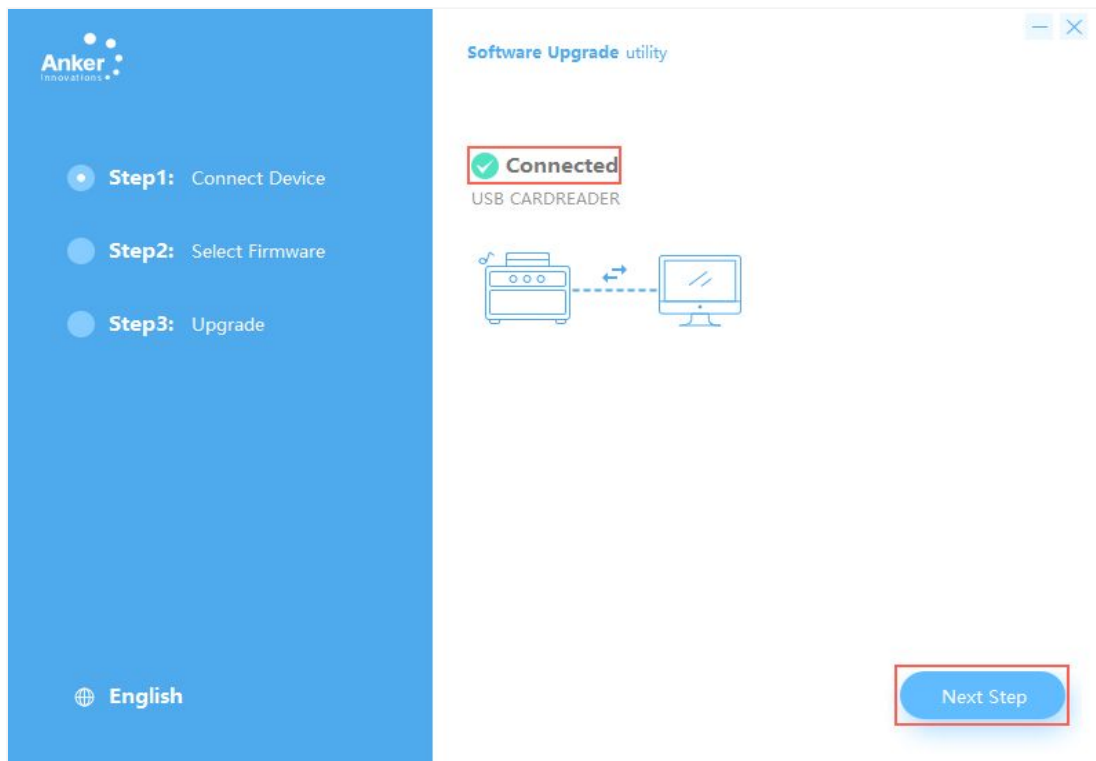

 
Step 4: Click the “Choose” button and select “A3161 Firmware,” then click “Next Step.”

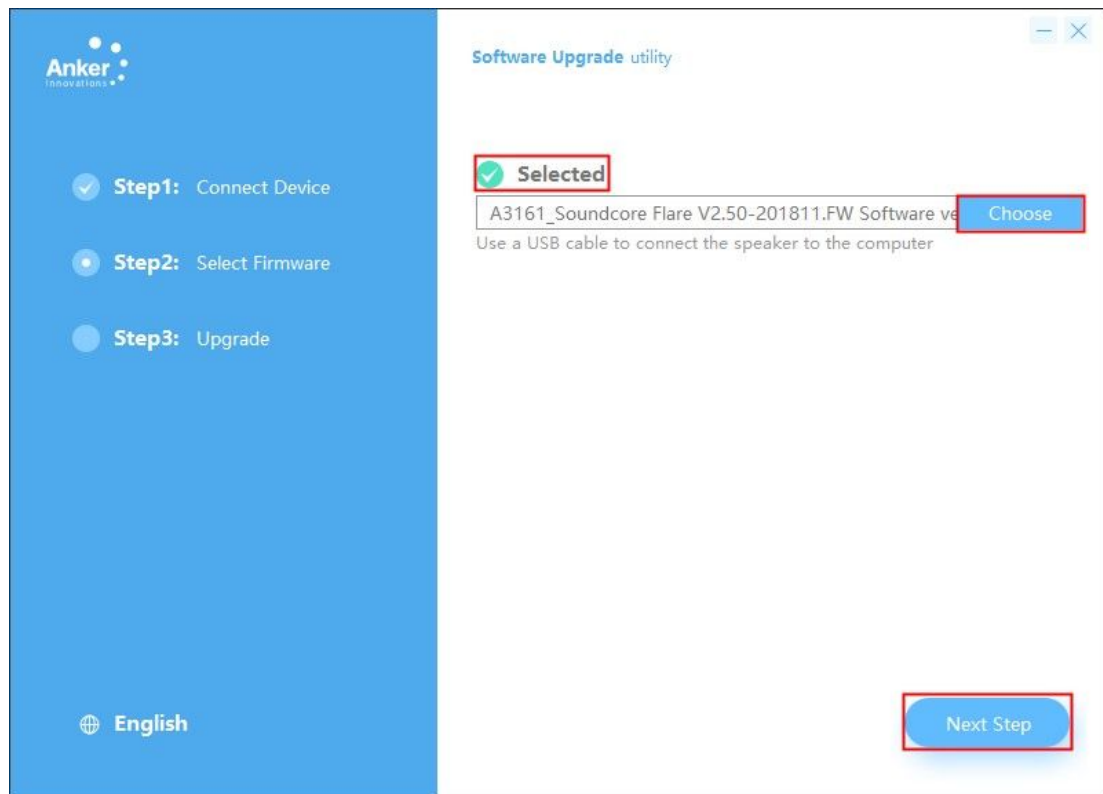

Step 5: When the progress bar is full, the upgrade is successful. Soundcore Flare will turn on automatically in a few seconds.

Notes:

- 1) Do not unplug the USB charging cable or press any buttons on the speaker while the upgrade is in progress.
- 2) Hold down the power button for 10 seconds if the speaker seems stuck in the upgrade process.



Step1: Connect Device

Step2: Select Firmware

Step3: Upgrade


English

Software Upgrade utility

Upgrading...

(2M) DOWNLOAD LFI ...

Do not disconnect while upgrade is in progress.



Step1: Connect Device

Step2: Select Firmware

Step3: Upgrade

English

Software Upgrade utility

Update Successful

The firmware upgrade was successful.

Finish